


METHODS OF ANCHORAGE

Anchor with #8 screws through frame and shim.

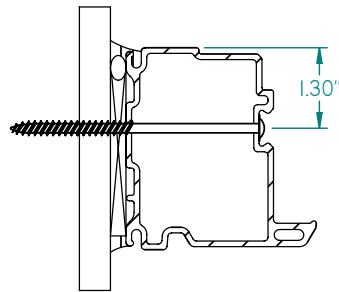



HEAD, SILL & JAMBS

NOTES:

1. Units must be plumb, square, shimmed, and secured to surrounding structure following local building codes.
2. Allow 1/4" space between frame and rough opening at head and both jambs.
3. Secure corner anchors approximately 7" from all corners.
4. Perimeter anchors should not exceed 29" on center.

RECOMMENDED ANCHOR LOCATIONS

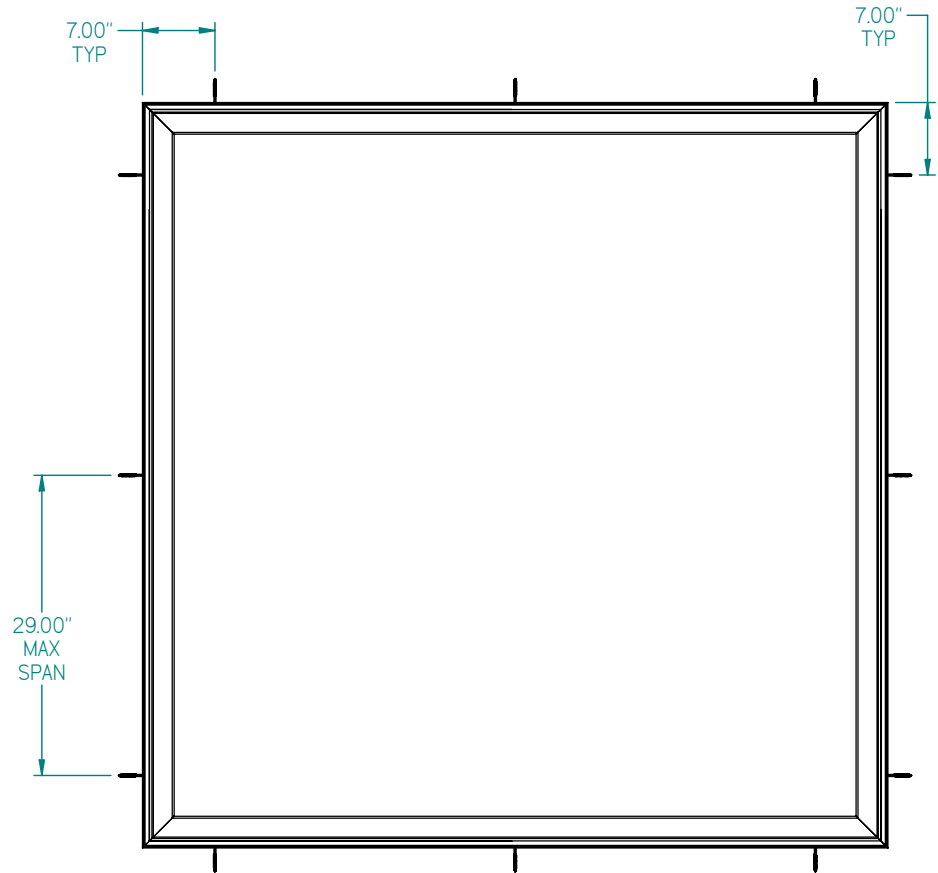

NO.	DATE	BY	REVISIONS	NO.	DATE	BY	REVISIONS	PRINT APPROVAL	MATERIAL:	 COMFORT LINE LTD. 5500 ENTERPRISE BLVD. TOLEDO, OH 43612 419-729-8520
1				7				ENGINEERING MANAGER	TYPICAL WALL = (EXCEPT AS NOTED)	
2				8					BREAK SHARP CORNERS = (EXCEPT AS NOTED)	
3				9					WT./FT =	2100 PICTURE
4				10					PERIMETER =	INSTALLATION DRAWING
5				11					TOLERANCES (EXCEPT AS NOTED)	SCALE:
6				12					DECIMAL ± .010	DATE: 08/12/08
									FRACTIONAL ± 1/32"	DRAWN BY: ALH
									ANGULAR ± 2°	